

# INSTRUCTION MANUAL FOR SELF-LEARNING MODEL RMC-195SL & RMC-255SL

## (2-BUTTONS INTO CLONING MODE)



**RMC-195SL**



**RMC-255SL**

### *Note:*

- 1. If the original remote is hopping code, you will not be able to clone it successfully.*
- 2. No need to open the case when cloning.*

### 1). Enter Cloning Mode for RMC-195SL(or RMC-255SL):

- a. (When copy, keep away from metal table) Press the button you want to learn and any other button **at exactly same time** until the LED light flashes 4 times.

### 2). Cloning original remote to RMC-195SL:

- b. Keep pressing the button you want to learn in order to copy from original remote and release another button after you finish above step (a.).
- c. Place original remote on the back of RMC-195SL(near the battery position), and press the button which you want to clone until the LED light of RMC-195SL flashes 3 times(cloning is finished).

### 3). Repeat from step a. for the rest buttons you want to clone.

*P.S. If the LED light of RMC-195SL does not flash 4 times when you press 2 buttons at the same time, try again; If the LED light of RMC-195SL does not flash 3 times when you copy original remote, change the position of the original remote until RMC-195SL flash.*

Please refer to our Demonstrating video on Youtube: [https://youtu.be/F9Rp\\_c8Yalk](https://youtu.be/F9Rp_c8Yalk)