


DUPLICATOR RMC-888

User's Guide

Model: RMC-888

1. PART NAME AND FUNCTIONS

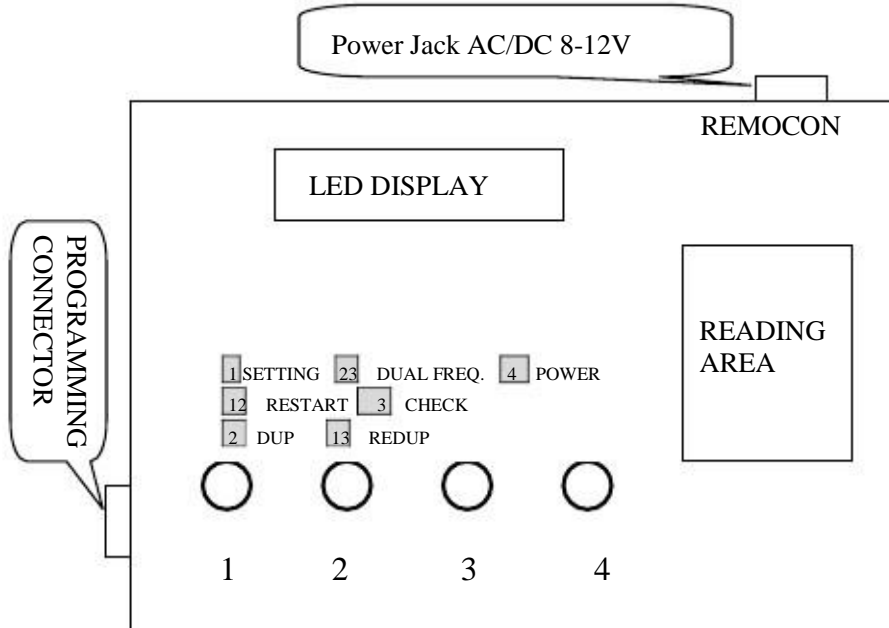

2. DUPLICATING

Procedure	Status Display	Features
1. Plug the adapter into an AC outlet.	0.0	Frequency display
2. Press the 1 (SETTING) button	r - - 1	Ready for reading—Waiting for copy 1 st code.
3. Place the original transmitter on top of READING AREA then press its first button.	- - - -	Code reading, press and hold the transmitter button until The Display shows done.
	done	Code reading completed
5 possible statuses after code reading	A - 10	To use REMOCON type A remote.
	b - 10	To use REMOCON type B remote.
	b - 04	To use REMOCON type B remote.
	rety	Press the 1 (setting) button to retry code reading
4.	E - 10	Code has not successful duplicated. Repeat procedure 2. or press 12 (RESTART)
	r - - 2	Waiting for the 2 nd code from the transmitter
5. Press the 2 nd button of the transmitter	- - - -	Repeat above step 3.
6. Following step 3, choosing either REMOCON type A or type B remote. Connecting the remote (REMOCON) to duplicator via cable connector, press 2 (DUP.) button.	P - - -	Code is programmed into REMOCON transmitter
If above steps appeared	E - 20	Switching over type A remote to type B remote.

7. For frequency display, press 1 (SETTING), tune remote (REMOCON) frequency to match original transmitter.	0.0	For example 418.2 done
--	------------	------------------------

Remark:

- REMOCON type A remote : Old version remote, including RMC-519.
- REMOCON type B remote : New version remote transmitter, including RMC-550, RMC-551, RMC-555, RMC-556, RMC-535....etc.
- Status **A-10** indicates both REMOCON type A and type B remotes are compatible.
- Satus **b-10** or **b-04** indicates only REMOCON type B remotes are compatible

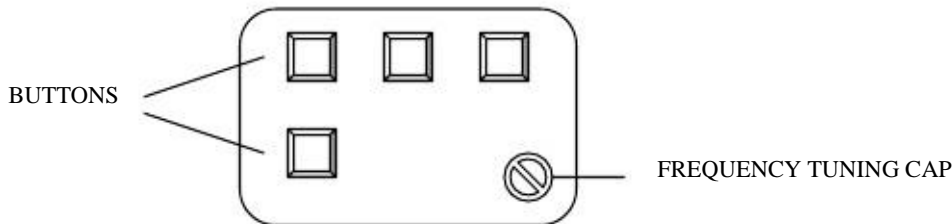


Fig. 1(RMC-555)

3. CODE CHECKING

Procedure	Status Display	Features
1. Press 3 (CHECK) button	Chec	Start CHECK function
2. Press 1 st button on the remote (REMOCON)	- - - -	Code reading (press and hold the button until the Display shows done)
	done	Code reading completed
	L - - 1	Code matched the 1 st button of the original transmitter
3. Press 2 nd button on the transmitter	- - - -	Code reading (press and hold the button until the Display shows done)
	done	Code reading completed
	L - - 2	Code matched the 2 nd button of the original transmitter
4. Repeat step above if required	no - -	Code matching unable to confirm. But it doesn't mean It's a duplicating failure, especially for b-04 .
		Repeat step 2. And 3.

4. REDUPLICATING(Duplicating from REMOCON remotes)

Provide mass production capability

Setting Procedure	Status Display	Features
1. Connecting the original remote to RMC888 via cable connector, press 13 (REDUP.)	r - - -	Code reading
	rA10	Code reading completed, REMOCON type A remote
	Pb04 or Pb10	Code reading completed, REMOCON type A remote
If above step appears	E - - 05	Code reading failed. Please check cable connection or the transmitter.

2. Connecting a new REMOCON remote to Duplicator via cable connector, and press 2 (DUP.)	p - - -	Programming the new REMOCON remote
	PA10	Programming completed for REMOCON type A
	Pb04, Pb10	Programming completed for REMOCON type B

5. DUAL FREQUENCY DUPLICATING(For Dual Frequency Remote only)

Setting Procedure	Status Display	Features
1. Press 23 (DUAL FREQ.) button	r1 1 1	Enter dual frequency duplicating mode r11X(see below)
2. Press 23 (DUAL FREQ.) button	r1 2 1	Enter dual frequency duplicating mode r12X(see below)
3. Press 23 (DUAL FREQ.) button	r - - 1	Enter single frequency duplicating mode
4. Following the above duplicating procedures.		Please refer above methods.

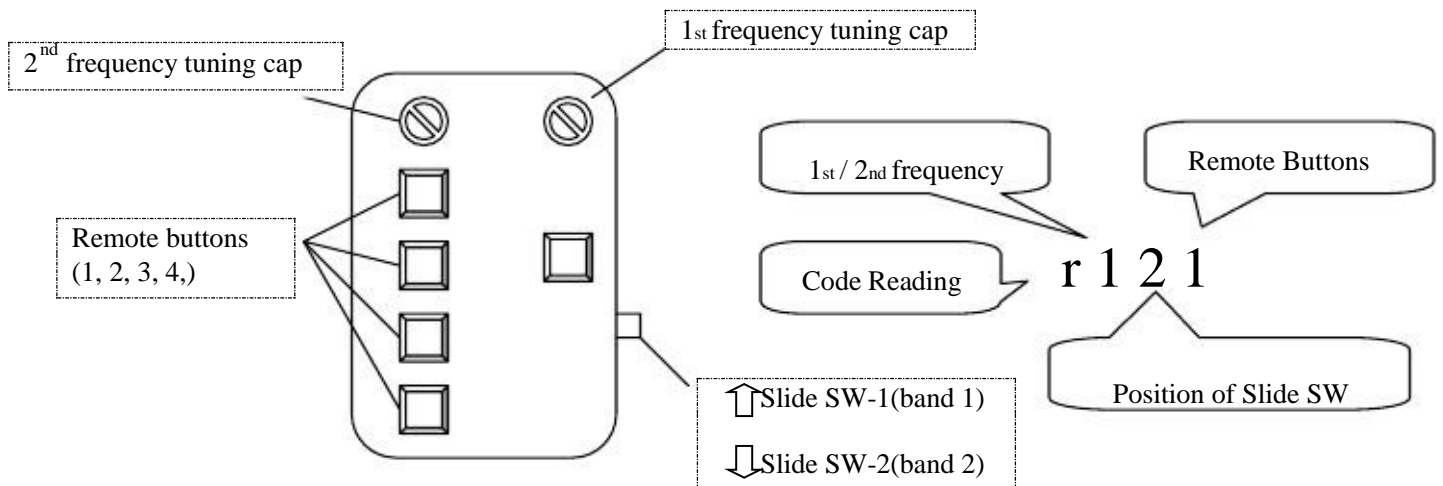


Fig. 2(RMC-552)

6. ADVANCE DUPLICATE FUNCTION FOR DUAL FREQUENCY

Provide only dual frequency remotes(REMOCON)

Transmitter(REMOCON) Dual frequency	Status Display		Transmitter(REMOCON) Remote Button
	1st frequency	2nd frequency	
Dual frequency A	r 1 1 1	r 2 2 1	1
	r 1 1 2	r 2 2 2	2
	r 1 1 3	r 2 2 3	3
	r 1 1 4	r 2 2 4	4
Dual frequency B	r 1 2 1	r 2 1 1	1
	r 1 2 2	r 2 1 2	2
	r 1 2 3	r 2 1 3	3
	r 1 2 4	r 2 1 4	4

CHART 1

While REMOCON remote setting on SW-1, it can transmit either 1st or 2nd frequency. Likewise, while setting on SW-2, it also can transmit either 2nd or 1st frequency.

Example 1.: Duplicate two original transmitters X(1st frequency) and Y(2nd frequency) into one dual frequency remote(REMOCON). **When the switch of REMOCON transmitter is set on SW-1, we would like to copy transmitter X to button 1, 2(band 1) of REMOCON remote; when the switch is set on SW-2, we would like to copy transmitter Y to button 1, 2(band 2) of REMOCON transmitter.**

Please follow following duplicate procedures(Please refer to **fig. 3**):

1. Connecting the remote (REMOCON) to RMC-888 via the cable connector. Press **23** (DUAL FREQ.) until LED display shows...**r 1 1 1**.
2. Press the first button of the first original transmitter, X, until LED display shows...**r 1 1 2**.
3. Press the second button of the first original transmitter, X, until LED display shows...**r 1 1 3**.
4. Press **1** (SETTING) button until LED display shows...**r 2 2 1**.
5. Press the first button of the 2nd original transmitter, Y, until LED display shows...**r 2 2 2**.
6. Press the second button of the 2nd original transmitter, Y, until LED display shows...**r 2 2 3**.
7. Press **2** (DUP.), until LED display shows...**P X X X**, which means code duplicate completed.

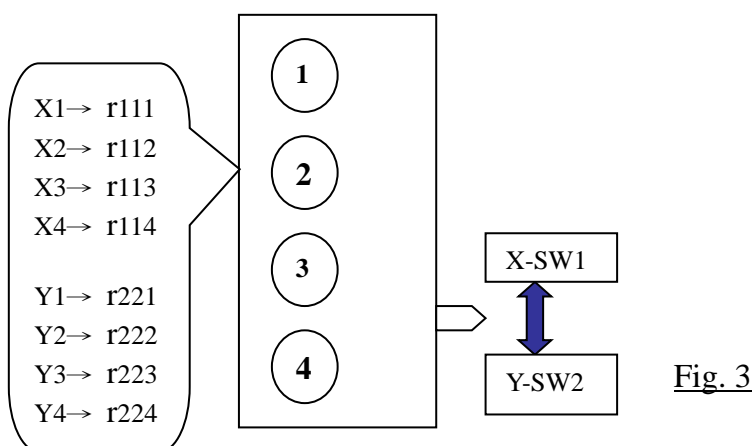


Fig. 3

Example 2.: Duplicate two original transmitters X(1st frequency) and Y(2nd frequency) into one dual frequency transmitter(REMOCON). **When the switch of REMOCON remote is set on SW-1, we would like to copy transmitter X to buttons 1st, 2nd of REMOCON remote and copy transmitter Y to buttons 3rd, 4th of REMOCON remote.**

Please follow following duplicate procedures:

1. Connecting the remote (REMOCON) to RMC-888 via the cable connector. Press **23** (DUAL FREQ.) until LED display shows...**r 1 1 1**.
2. Press the first button of the first original transmitter, X, until LED display shows...**r 1 1 2**.
3. Press the second button of the first original transmitter, X, until LED display shows...**r 1 1 3**.
4. Press **23** (DUAL FREQ.) button until LED display shows...**r 1 2 1**.
5. Press **1** (SETTING) button until LED display shows...**r 2 1 3**.
6. Press the first button from the 2nd original transmitter, Y, until LED display shows...**r 2 1 4**.
7. Press the second button of the 2nd original transmitter, Y, until LED display shows...**r 2 1 5**.
8. Press **2** (DUP.), LED display shows...**P X X X**, which means code duplicate completed.

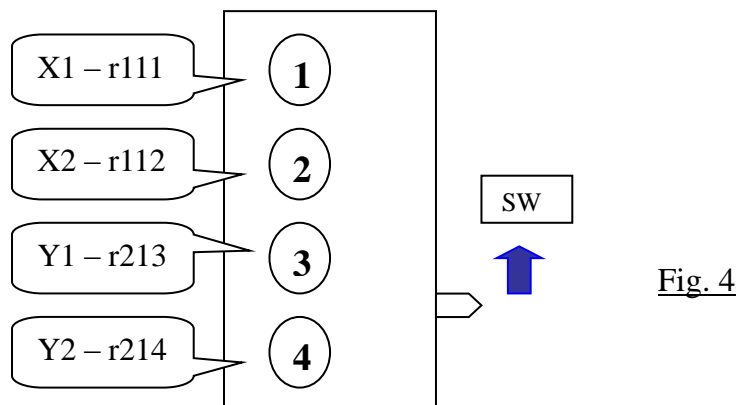


Fig. 4

ERROR READING

Status Display	Trouble shooting
E - 02	Duplicating failure, please check the cable connection.
E - 03	Duplicating failure, please check the cable connection.
E - 05	Duplicating failure, please check the cable connection.
E - 10	Reading failure, please re-operate.
E - 12	"Long code" received from original transmitter, unable to duplicate to 5 th and 10 th buttons.
E - 20	Wrong remote type, please use REMOCON type B remote.

***Above messages will be indicated as flash sequentially. Press 1 (SETTING) to keep operating.**

Revised by Nicole Su, 2015/8/3
Proofread by Morris Ho, 2015/8/31