

INSTRUCTION MANUAL FOR SELF-LEARNING MODEL RMC-611, RMC-168SL & RMC-195SL (2-BUTTONS INTO CLONING MODE)



RMC-611



RMC-168SL



RMC-195SL

Note:

- 1. If the original remote is hopping code, you will not be able to clone it successfully.*
- 2. No need to open the case when cloning.*

- 1). Set the buttons of RMC-168SL into Cloning Mode:
 - a. Place RMC-168SL on a flat surface (keep away from metal table), press the button you want to learn and any other button **at exactly same time** until the LED light flashes 4 times.
- 2). Cloning existing remote to RMC-168SL:
 - b. Keep pressing the button you want to learn in order to copy from original remote and release another button when you finish above step (a.).
 - c. Place original remote within 2cm with RMC-168SL, and press the button which you want to clone until the LED light of RMC-168SL flashes 3 times (cloning is finished).
- 3). Repeat from step a. for the rest buttons you want to clone.

P.S. If the LED light of RMC-168SL does not flash 4 times when you press 3 buttons at the same time, please try it more times until it works.